



Miniexcavators – Undercarriages - Minidumpers – Skid Steer Loaders – Aerial Platforms

ATTENTION: THIS BOOKLET DOESN'T SUBSTITUTE THE OPERATION AND MAINTENANCE MANUAL. IT'S NECESSARY TO READ CAREFULLY AND UNDERSTAND THE OPERATION AND MAINTENANCE MANUAL BEFORE CARRYING OUT ANY MANOEUVRE WITH THE MACHINE.

FAST INSTRUCTIONS FOR HINOWA LITHIUM MACHINES

ELECTRIC MOTOR FUNCTIONING:

Electric motor runs only when a joystick or a lever is pressed, in idle conditions electric motor is kept still in order to save energy.

BATTERIES LEVEL CHECK:



Icon indicating the charge level of the batteries pack

INPUT menu value displaying the charge level percentage of the batteries pack



BATTERIES CHARGING:

To charge the batteries, connect the local electric network to the machine socket with a proper cable, connection and disconnection must be done with main key "0". The main key could be leaved "0" in case of batteries only need to be charged, or main key could be switched "1" in case operator want to use the machine at the same time that batteries are charging.



Machine socket connected

Main key on the batteries pack



Icon indicating that the battery is charging, so the socket is connected to the electric network. It's possible to charge and use the machine at the same time

To know the charging status compare the led on the batteries charger with its sticker.



Batteries charger led on 48 Volt batteries pack



Batteries charger led on 72 Volt batteries pack

OTHER LITHIUM SYSTEM ICONS:



Icon indicating a Lithium system error. In case this icon appears re-start the platform from the main key. If the icon is still on consult the use and maintenance manual for diagnosis

Icon super turtle condition. It happens when the batteries pack voltage level is under 10%. In this condition the machine runs very slow in order to save energy and to indicate the operator to put machine in charge as soon as possible

